




The Caring Containment Professionals.™

ProLite® Receiver Collar

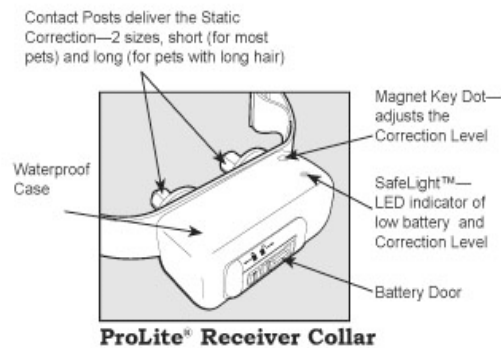

Setup and Ongoing Operation

How to Replace the Batteries

1. Gently loosen the Battery Door setscrew (if equipped) counterclockwise about 1-2 turns. (Note: do not completely remove the setscrew).
2. With a small coin, slide the latch on the Battery Door to unlock it, and then gently pry the door from the ProLite® Receiver Collar.
3. Remove the old batteries and insert two new 3-volt CR2032 lithium batteries into the Battery Door. Observe the correct battery polarity as indicated on the Battery Door. These common batteries can be purchased from any battery retail store or your PetSafe® Pro Dealer.
4. Place the Battery Door back into the ProLite® Receiver Collar. With a small coin, slide the latch to lock it and gently tighten the setscrew (clockwise about 1-2 turns).
5. Discard old batteries in an approved recycling location.

How to Change the Correction Level

1. The ProLite[®] Receiver Collar has ten levels of safe static correction. Level one is the lowest level and ten is the highest. If you are unsure about what level is best for your pet, contact your PetSafe[®] Pro Dealer for assistance.
2. Located on the left side of your Pro transmitter is a round white dot. The ProLite[®] Receiver Collar has a small raised dot located in the upper right corner.
3. Touch the ProLite[®] Receiver Collar raised dot to the Pro transmitter round white dot for one second. Separate the receiver from the transmitter and the SafeLight[™] will activate indicating the correction level. To raise the correction level, touch the dots together for one second, separate the receiver from the transmitter, and count the number of times the SafeLight[™] activates. Please note that the dots must be touched within 5 seconds from the last flash to change to the next level.
4. If the ProLite[®] Receiver Collar is not programmed for the desired level, repeat the process of touching the dots together until you reach the desired level.

If your pet requires containment training, contact your PetSafe[®] Pro Dealer and inquire about our safe, humane and effective LiteTouch Training[™]. This exclusive training program can be customized to your pet's behavior and temperament. Your PetSafe[®] Pro Dealer is a trained and certified IACP professional and can offer different training solutions for you pet.

Each time you put the ProLite[®] Receiver Collar on your pet, check that it fits properly and the Contact Posts contact your pet's skin. If necessary, shave a small area, or use longer Contact Posts. You should be able to slip one fingertip between a Contact Post and your pet's skin if the ProLite[®] Receiver Collar is on properly. Your PetSafe[®] Pro also offers a flexible LiteTouch[®] Contact that replaces the Contact Posts offering your pet a more comfortable fit of the ProLite[®] Receiver Collar.

Regularly check and clean your pet's neck. If the ProLite[®] Receiver Collar is too tight or your pet wears it too long, it can cause Pressure Necrosis, a condition where the skin deteriorates. If a rash or sore forms, remove the ProLite[®] Receiver Collar for a few days. When replacing the ProLite[®] Receiver Collar, make sure the Contact Posts and the pet's neck are clean. Consult a veterinarian if needed. Every month, check that the ProLite[®] Receiver Collar beeps near the Boundary. Battery life will depend upon how often your pet tests the boundaries. In cold weather conditions, it may be necessary to replace the batteries more often.

The SafeLight[™] acts as a low battery indicator, flashing every 4 to 5 seconds when battery replacement is required.

The ProLite[®] Receiver Collar is attached to a nylon collar that can be washed with a mild pet friendly detergent or a replacement nylon collar is available from your PetSafe[®] Pro.

Radio Systems Corporation
10427 Electric Avenue
Knoxville, TN. 37932
www.petsafepro.com